



### Removal

---

- 1 Open enclosure for first aid kit and warning triangle.

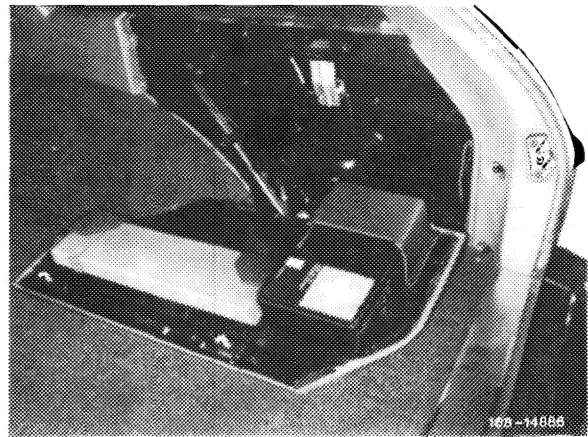

- 2 Unscrew fastening screws.
- 3 Remove paneling from clips in range of rear center pillar and remove.

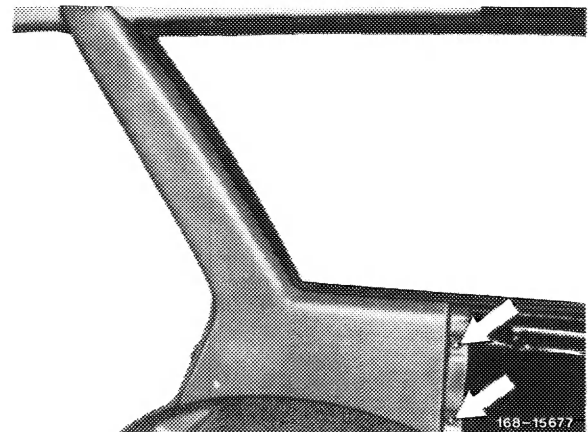

### Installation

---

- 4 Attach paneling by means of clips to rear center pillar and screw down.
- 5 Close enclosure for first aid kit and warning triangle.

